

RemoteKVM User Guide

Notice

Document Version : 1.0.0

Date : 2012.03. 06

RemoteKVM Model : KV0101

Copyright © 2012 RSUPPORT Co., Ltd. All Rights Reserved

The information contained in this manual and future improvements are subject to change without notice.

Rsupport does not take any responsibility for any marketability nor compatibility apart from the usage described in the manual.

Under no circumstances will Rsupport be liable to direct, indirect, incidental nor accidental damages due to errors in the manual.

This manual is the intellectual property of Rsupport Inc. and is protected under international copyright laws. Reproducing or copying all or part of this document without the prior written consent of Rsupport Inc. is a violation of international copyright law.

(Windows 95 / 98 / ME / NT / 2000 / 2000 Server / XP / Server 2003 / Vista / Server 2008 / 7 are registered trademarks of Microsoft Corp., Android is registered trademarks of Google Inc. They are protected under international copyright laws. Any third party registered trademarks mentioned in this manual are used for reference and descriptive purposes only and are still the intellectual property of the third party in question).

Table of Contents

1. RemoteKVM Introduction.....	6
1.1. What is RemoteKVM?	6
2. RemoteKVM Components.....	6
2.1. What's included?	6
2.2. Available Ports and Connections.....	6
2.3. Safety Precautions	7
3. Connecting Peripheral Devices.....	7
4. RemoteKVM Appliance Connection	7
5. Setting up RemoteKVM	8
6. Using RemoteKVM.....	10
6.1. Sign-in / Sign-out.....	10
6.2. RemoteKVM Menu	11
6.3. Remote Access	11
6.3.1. Plug-in Installation.....	11
6.3.2. Real-time Monitoring & Remote Control.....	12
6.3.3. More Actions.....	12
6.4. Recordings.....	14
6.4.1. Download Recorded Sessions	14
6.4.2. Recording Information.....	14
6.4.3. Find Session Recordings by Date	15
6.5. Session Logs.....	16
6.5.1. Find Logs by Date.....	17
6.6. Device Settings.....	17
6.6.1. Add a Device.....	17
6.6.2. Remove a Device.....	18
6.7. Users	18
6.7.1. Add a User	18
6.7.2. Remote a User.....	19
6.7.3. Edit User Permissions.....	20
6.7.4. Change User Password.....	20
6.8. Language Settings.....	21
6.9. Updating Firmware.....	21
6.9.1. What is Firmware?	21

6.9.2.	Check for the Latest Firmware Update	22
6.9.3.	Upload Firmware	22
6.10.	Database Backup / Restore	23
6.10.1.	Backing up the Database	23
6.10.2.	Restoring the Database	23
6.11.	Remote Access Plug-in Setup	24
6.11.1.	Downloading the Remote Access Plug-in	24
6.11.2.	Installing the Remote Access Plug-in	25
6.11.3.	Updating the Remote Access Plug-in	27
7.	Remote Access Controls	27
7.1.	Using Remote Control	27
7.2.	RemoteViewer Resolution	27
7.3.	Using RemoteViewer	28
7.3.1.	RemoteViewer Features	28
7.3.2.	RemoteViewer > Main	29
7.3.2.1.	Control Settings	29
7.3.2.2.	Remote PC Screen Lock	29
7.3.2.3.	Always on Top	29
7.3.2.4.	Exit	29
7.3.3.	RemoteViewer > Keyboard and Mouse Menu	29
7.3.3.1.	Keyboard and Mouse Control	30
7.3.3.2.	Ctrl+Alt+Del Transfer	30
7.3.4.	RemoteViewer > Screen	30
7.3.4.1.	Customization	30
7.3.4.2.	Autofit	30
7.3.4.3.	Actual Size	30
7.3.4.4.	Full Screen	30
7.3.4.5.	Refresh	31
7.3.5.	RemoteViewer > Tools	31
7.3.5.1.	Screen Capture	31

7.3.6.	RemoteViewer > Virtual Drives	31
7.3.6.1.	Virtual USB Drive.....	31
7.3.6.2.	Virtual CD-ROM.....	31
7.3.6.3.	Virtual Image.....	31
7.3.6.4.	Virtual Connection Cancel	32
8.	About.....	32
9.	Help	32
10.	Customer Support.....	32


1. RemoteKVM Introduction

1.1. What is RemoteKVM?

Rsupport's RemoteKVM (Model: KV0101) is unlike any other Network KVM product as it supports Full HD (1920 x 1080) Resolution as well as 20 other standard resolutions. Proven reliable by over 5000 clients world-wide, our self-developed VRVD 5.0 technology ensures responsive mouse and keyboard control even with prolonged usage. In addition, the ability to monitor more than 10 full HD screens in real time helps improve management efficiency and with RemoteKVM's ability to immediately identify and provide hardware status information allows for quicker diagnoses of problems and significantly decreased downtime.


2. RemoteKVM Components

2.1. What's included?

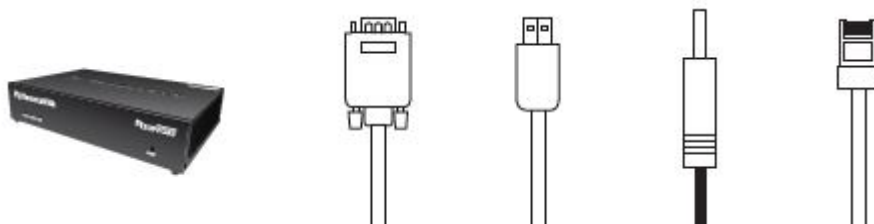

KVM Appliance (KV0101) – VGA Cable – USB Cable – Power Cord – Ethernet Cord

2.2. Available Ports and Connections

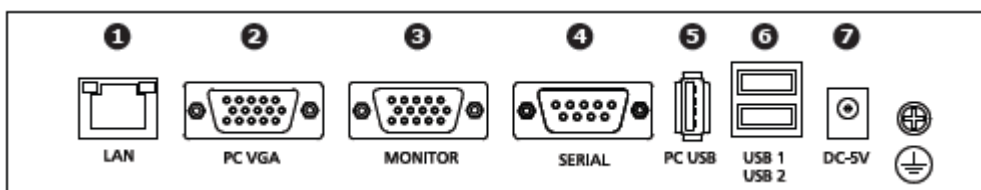


- ① LAN : Ethernet Port
- ② PC VGA : PC VGA Port
- ③ MONITOR : Monitor Port
- ④ SERIAL : Serial Port
- ⑤ PC USB : PC USB Slots
- ⑥ USB: (2)USB Slots
- ⑦ DC-5V : Power Jack (5V)

2.3. Safety Precautions

- Always refer to the user manual when installing this device.
- Double-check your network environment prior to setting up the device.
- Connect the VGA Monitor cable and USB cables to their appropriate ports on the RemoteKVM appliance.
- If the screen does not display properly, verify that the cables have been connected correctly.
- For inquiries involving technical support or installation, please contact your local technical support desk.

3. Connecting Peripheral Devices

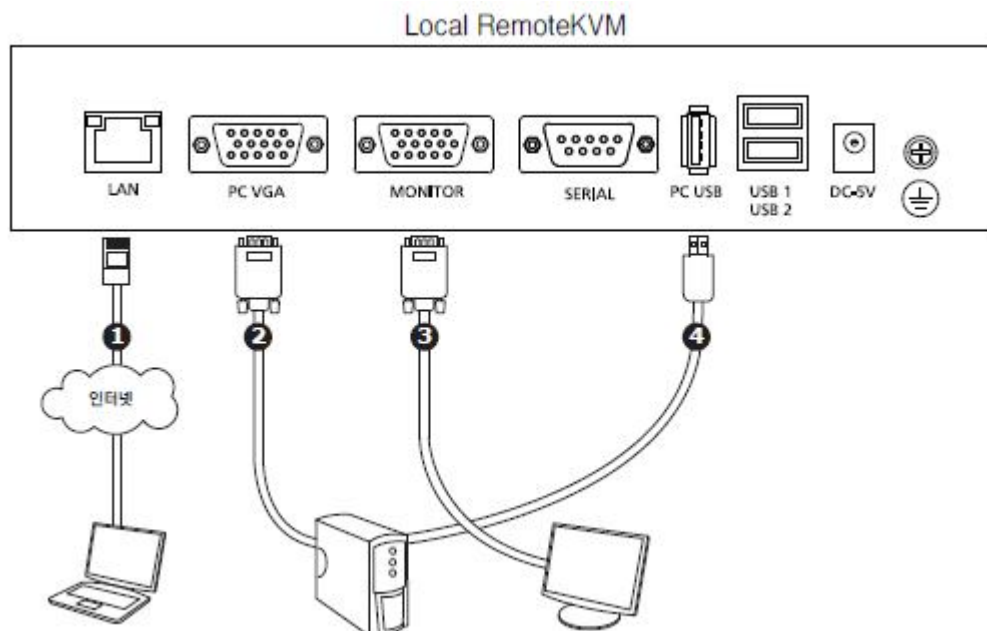


- ① Connect your LAN port to an external internet connection.
- ② Connect the RemoteKVM PC VGA port to the PC's VGA-Out port.
- ③ Connect the RemoteKVM Monitor port to a local monitor.
- ④ Connect the RemoteKVM "PC USB" port to the PC to enable mouse and keyboard control.

4. RemoteKVM Appliance Connection


RemoteKVM's central management system allows for easy scalability and

management.

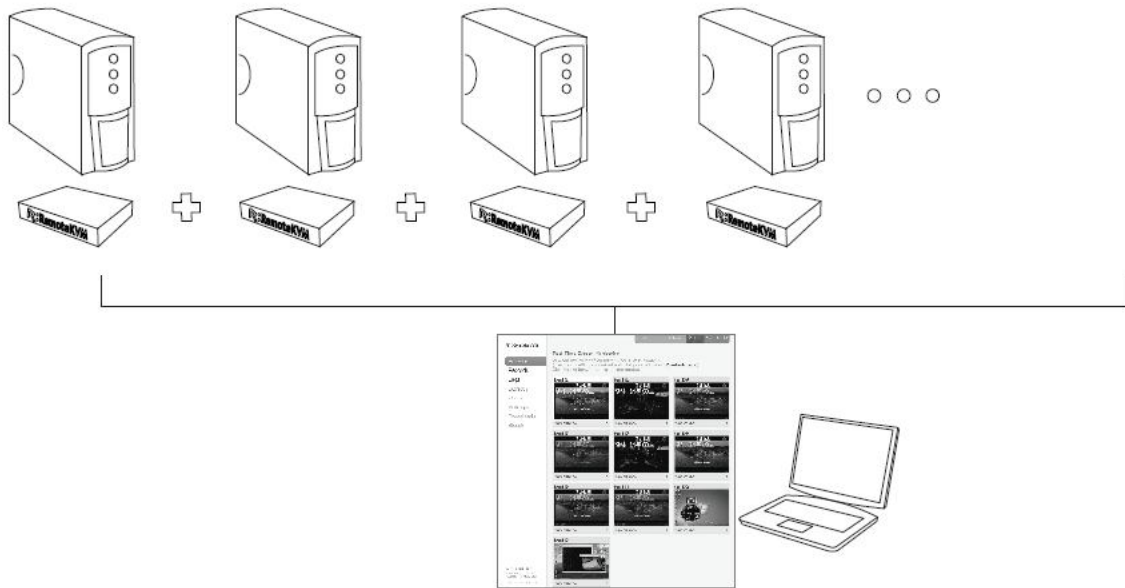

In addition to the already registered devices, you can add additional RemoteKVM units through your web browser.

5. Setting up RemoteKVM

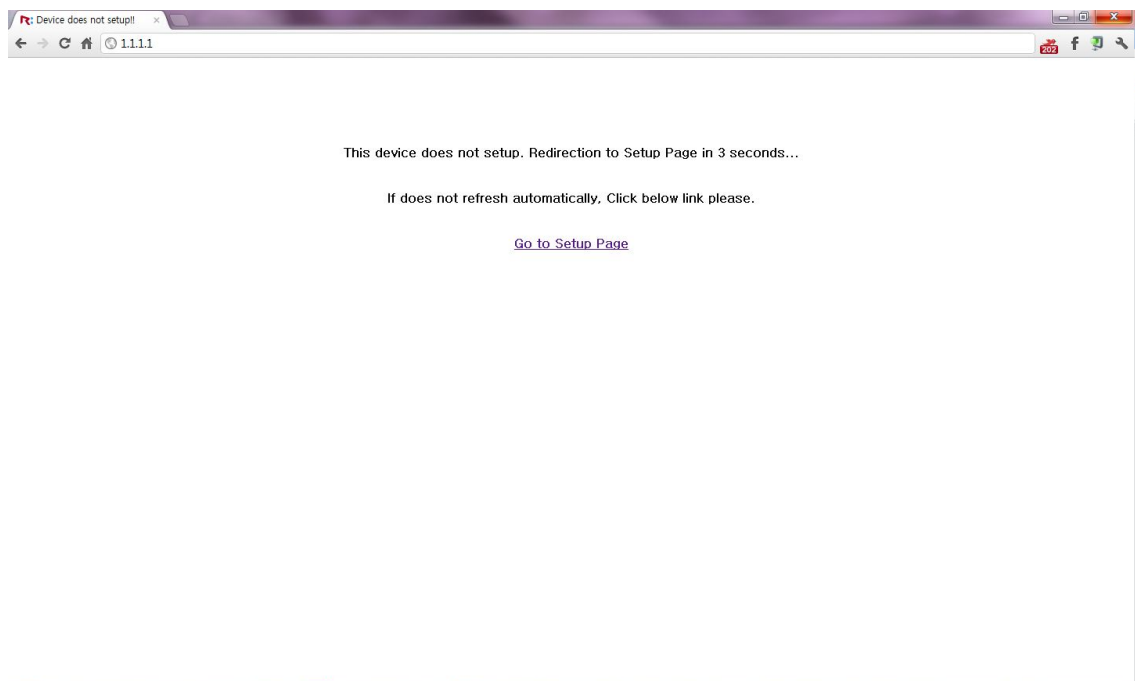

To start the RemoteKVM setup, launch your web-browser, while connected to the RemoteKVM device, and type: <http://1.1.1.1>.

(The PCs IP range must match the same format used with the KVM unit. i.e. same subnet mask, 255.255.255.255 and IP address, 1.1.1.2)

Setup - RemoteKVM

1.1.1.1/setup/

RemoteKVM

1. Input Basic Device Informations

2. Check & Setup Device

3. Restart Device

Device Name * KVM01
Only contain letters, numbers, '-' and '_'. (3~24 characters)
First Letter only can be Alphabet.

Device IP * 192.168.165.162
Input valid IP address form.

Default Gateway * 192.168.165.254

Subnet Mast * 255.255.255.0

Web Server Port * 80

Default DNS 168.126.63.1

Secondary DNS

Admin User Settings
Setting super admin account.

Admin ID * admin
Only contain letters, numbers, '-' and '_'. (3~24 characters)
First Letter only can be Alphabet.

Admin Password * *****
Password should be at least 4 characters.

Confirm Password * *****
Input Password again

Language Korean

Submit

COPYRIGHT©2012
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.0.Beta1(Build 1257)

Fill out the necessary fields and press 'Submit' when you've finished.

Setup - RemoteKVM

1.1.1.1/setup/

RemoteKVM

1. Input Basic Device Informations

2. Check & Setup Device

3. Restart Device

Check Input Value

Device Name : KVM01

Device IP : 192.168.165.162

Gateway : 192.168.165.254

Subnet mask : 255.255.255.0

Web Server Port : 80

Default DNS : 168.126.63.1

Secondary DNS : none

Admin ID : admin


Language : Korean

Are you sure set device this config?

YES NO

COPYRIGHT©2012
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.0.Beta1(Build 1257)


Verify the contents of the submitted fields and click 'Yes' to continue.

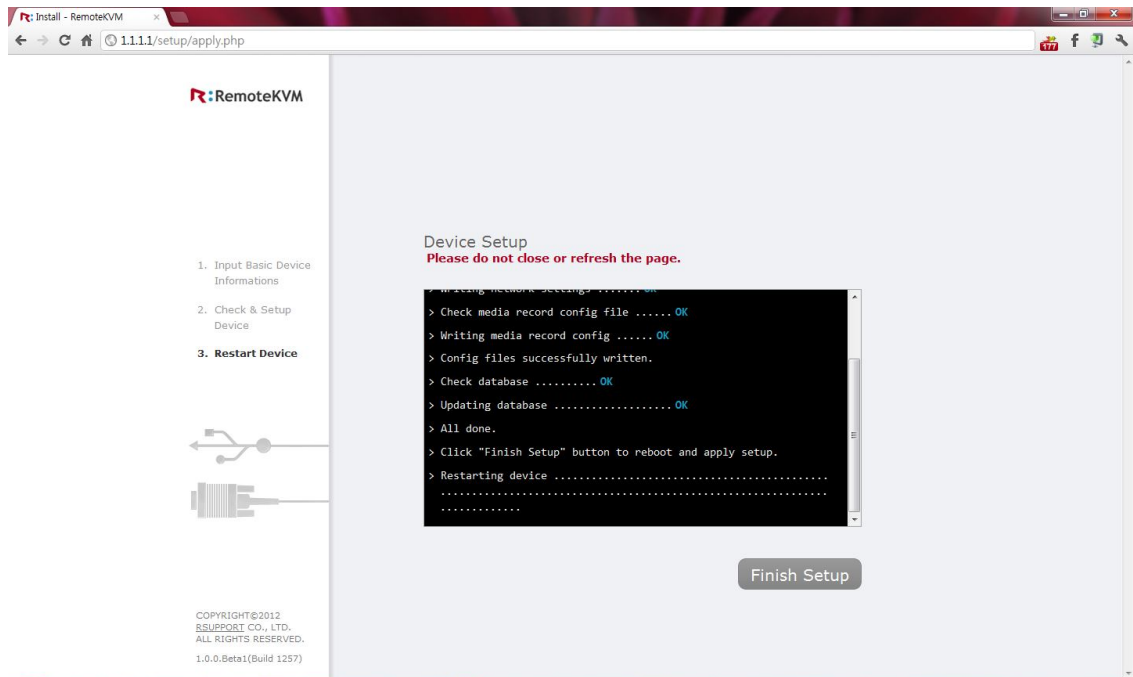


RemoteKVM will configure the new settings automatically. Click 'Finish Setup' to reboot and apply the new configuration.

6. Using RemoteKVM

6.1. Sign-in / Sign-out

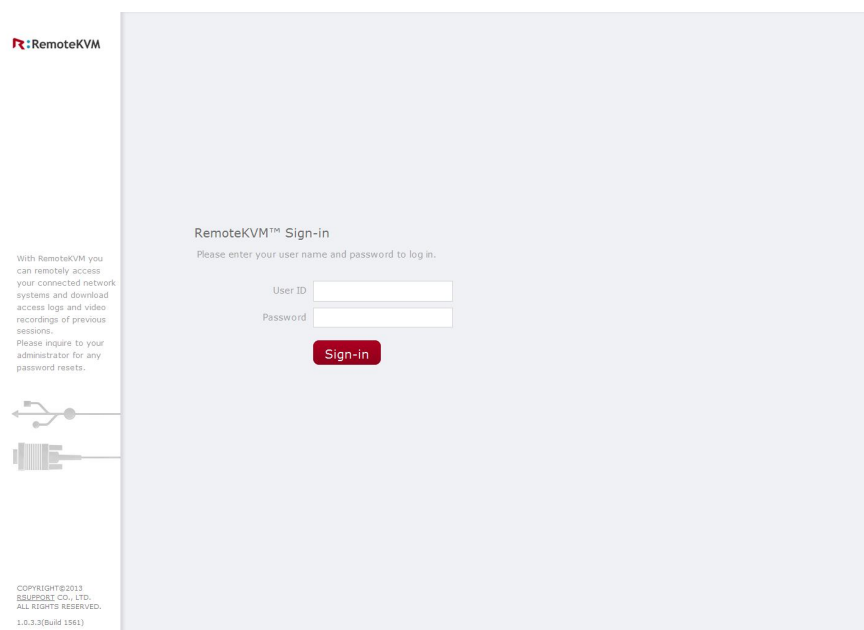


After completing the initial configuration and setup, you will be able to access the RemoteKVM Sign-in screen by typing your designated IP address.

Sign-out 

To exit RemoteKVM, click the 'Sign-out' button towards the top or exit your web browser.

6.2. RemoteKVM Menu

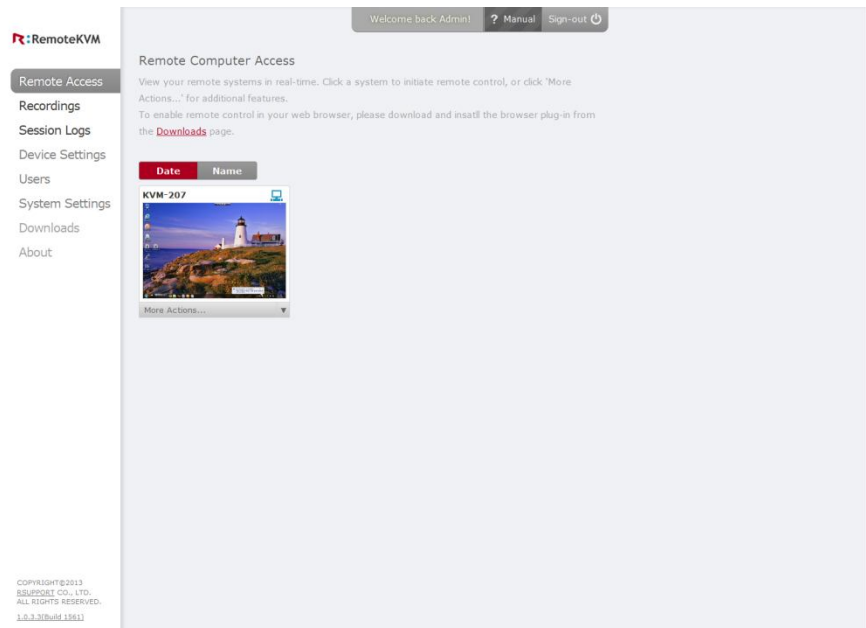


Menu Item	Description
Remote Access	Monitor and remote control registered PCs in real-time.
Recordings	View and download all previously recorded session videos.
Session Logs	View all actions performed within the RemoteKVM web interface.
Device Settings	Manage or add new devices to your RemoteKVM network.
Users	Create, delete, or modify RemoteKVM users.
System Settings	Modify RemoteKVM settings and preferences
Downloads	Download plug-in used for remote control.
About	Check RemoteKVM version and view additional information.

6.3. Remote Access

6.3.1. Plug-in Installation

For real-time monitoring and remote access, you must have the necessary plug-ins installed. If they are not installed, go to the 'Downloads' and install the plug-ins.

6.3.2. Real-time Monitoring & Remote Control

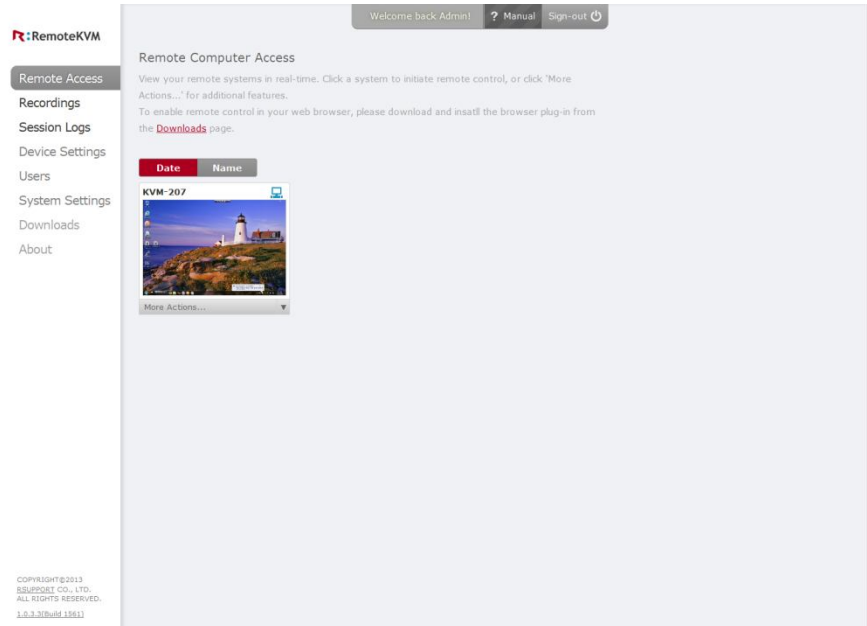


Upon logging into RemoteKVM, you will be able to monitor your devices in real-time and initiate remote control when necessary. In order to initiate remote control, click on the 'Play' button or select 'Remote Access' from the drop-down menu to launch RemoteViewer.

Remote control is only possible if the proper plug-ins are installed. For more information, refer to [\[6.11. Remote Access Plug-in Installation\]](#)

6.3.3. More Actions


You can execute additional commands through this drop-down menu.

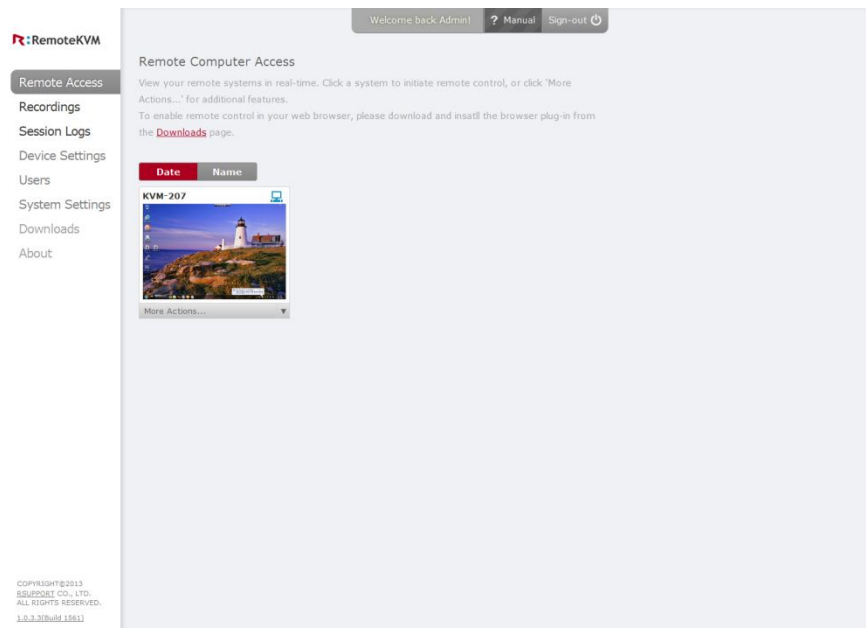

Menu Item	Description
Remote Access	Enables Remote Control
View Recordings	Brings you to the 'Recordings' page. You may view previously recorded support sessions from this page.
View Session Logs	Brings you to the Session Logs Page.
Device Settings	Brings you to the 'Device Settings' page. You may add, remove, or modify devices from this page. (Must have access to administrator privileges)
Reboot Device	Reboots the selected device. (Must have access to administrator privileges)
Turn on PC	Turns on the selected device. (Must have access to administrator privileges)

6.4. Recordings

6.4.1. Download Recorded Sessions

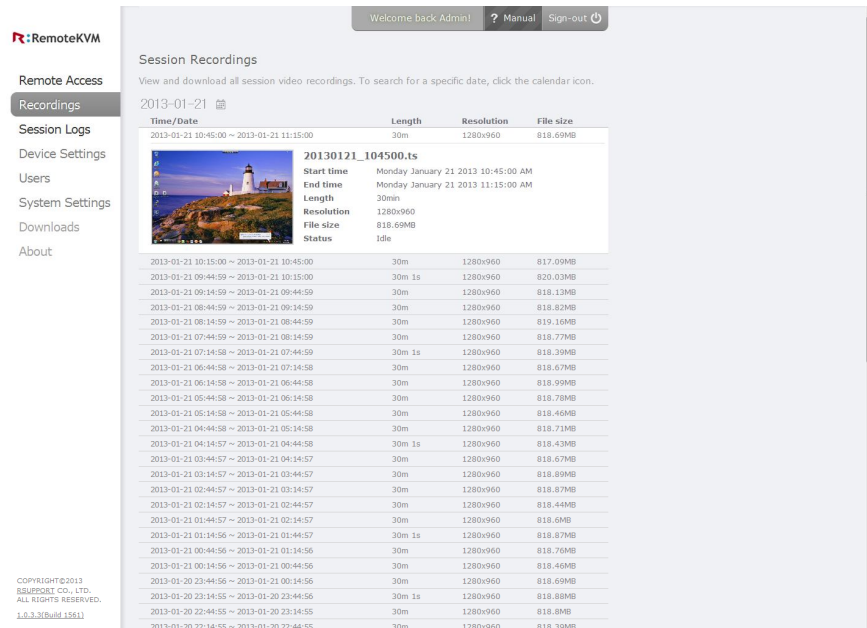

RemoteKVM

Remote Access

Recordings

Session Logs

Device Settings

Users

System Settings


Downloads

About

Session Recordings

View and download all session video recordings. To search for a specific date, click the calendar icon.


2013-01-21

Time/Date	Length	Resolution	File size
2013-01-21 10:45:00 ~ 2013-01-21 11:15:00	30m	1280x960	818.69MB
 <p>20130121_104500.ts</p> <p>Start time: Monday January 21 2013 10:45:00 AM</p> <p>End time: Monday January 21 2013 11:15:00 AM</p> <p>Length: 30min</p> <p>Resolution: 1280x960</p> <p>File size: 818.69MB</p> <p>Status: Idle</p>			
2013-01-21 10:15:00 ~ 2013-01-21 10:45:00	30m	1280x960	817.09MB
2013-01-21 09:44:59 ~ 2013-01-21 10:15:00	30m 1s	1280x960	820.03MB
2013-01-21 09:14:59 ~ 2013-01-21 09:44:59	30m	1280x960	818.13MB
2013-01-21 08:44:59 ~ 2013-01-21 09:14:59	30m	1280x960	818.82MB
2013-01-21 08:14:59 ~ 2013-01-21 08:44:59	30m	1280x960	819.16MB
2013-01-21 07:44:59 ~ 2013-01-21 08:14:59	30m	1280x960	818.77MB
2013-01-21 07:14:58 ~ 2013-01-21 07:44:59	30m 1s	1280x960	818.39MB
2013-01-21 06:44:58 ~ 2013-01-21 07:14:58	30m	1280x960	818.67MB
2013-01-21 06:14:58 ~ 2013-01-21 06:44:58	30m	1280x960	818.99MB
2013-01-21 05:44:58 ~ 2013-01-21 06:14:58	30m	1280x960	818.78MB
2013-01-21 05:14:58 ~ 2013-01-21 05:44:58	30m	1280x960	818.46MB
2013-01-21 04:44:58 ~ 2013-01-21 05:14:58	30m	1280x960	818.71MB
2013-01-21 04:14:57 ~ 2013-01-21 04:44:58	30m 1s	1280x960	818.43MB
2013-01-21 03:44:57 ~ 2013-01-21 04:14:57	30m	1280x960	818.67MB
2013-01-21 03:14:57 ~ 2013-01-21 03:44:57	30m	1280x960	818.89MB
2013-01-21 02:44:57 ~ 2013-01-21 03:14:57	30m	1280x960	818.87MB
2013-01-21 02:14:57 ~ 2013-01-21 02:44:57	30m	1280x960	818.44MB
2013-01-21 01:44:57 ~ 2013-01-21 02:14:57	30m	1280x960	818.69MB
2013-01-21 01:14:56 ~ 2013-01-21 01:44:57	30m 1s	1280x960	818.87MB
2013-01-21 00:44:56 ~ 2013-01-21 01:14:56	30m	1280x960	818.76MB
2013-01-21 00:14:56 ~ 2013-01-21 00:44:56	30m	1280x960	818.46MB
2013-01-20 23:44:56 ~ 2013-01-21 00:14:56	30m	1280x960	818.69MB
2013-01-20 23:14:55 ~ 2013-01-20 23:44:56	30m 1s	1280x960	818.88MB
2013-01-20 22:44:55 ~ 2013-01-20 23:14:55	30m	1280x960	818.8MB
2013-01-20 22:14:55 ~ 2013-01-20 22:44:55	30m	1280x960	818.39MB

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.30(Build 1561)

All recorded videos of support session can be stored on the RemoteKVM server. To download and view these videos, click on the date of the corresponding video, then click the 'Download' button that is displayed on the video preview screen.

6.4.2. Recording Information

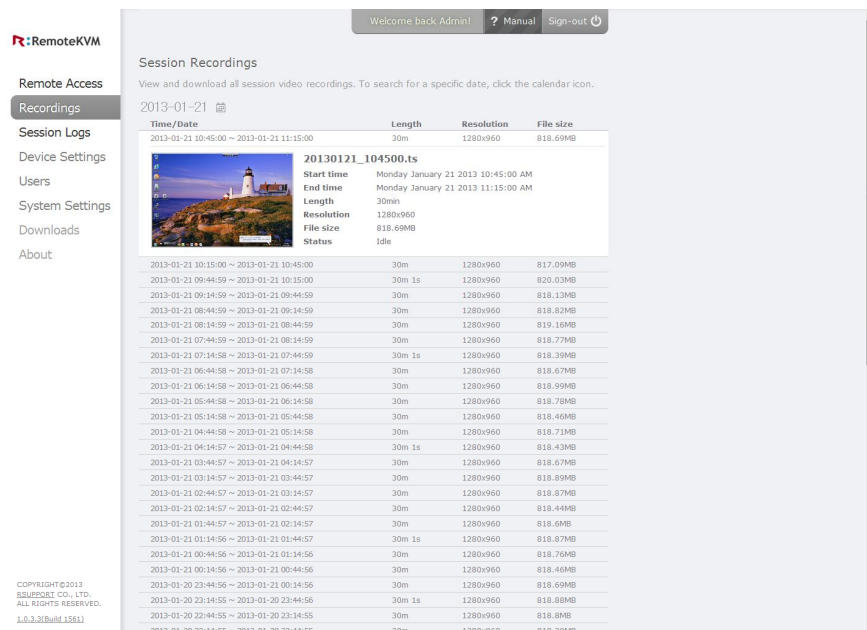

RemoteKVM

Remote Access

Recordings

Session Logs

Device Settings

Users

System Settings


Downloads

About

Session Recordings

View and download all session video recordings. To search for a specific date, click the calendar icon.

2013-01-21


Time/Date	Length	Resolution	File size
2013-01-21 10:45:00 ~ 2013-01-21 11:15:00	30m	1280x960	818.69MB
 <p>20130121_104500.ts</p> <p>Start time: Monday January 21 2013 10:45:00 AM</p> <p>End time: Monday January 21 2013 11:15:00 AM</p> <p>Length: 30min</p> <p>Resolution: 1280x960</p> <p>File size: 818.69MB</p> <p>Status: Idle</p>			
2013-01-21 10:15:00 ~ 2013-01-21 10:45:00	30m	1280x960	817.09MB
2013-01-21 09:44:59 ~ 2013-01-21 10:15:00	30m 1s	1280x960	820.03MB
2013-01-21 09:14:59 ~ 2013-01-21 09:44:59	30m	1280x960	818.13MB
2013-01-21 08:44:59 ~ 2013-01-21 09:14:59	30m	1280x960	818.82MB
2013-01-21 08:14:59 ~ 2013-01-21 08:44:59	30m	1280x960	819.16MB
2013-01-21 07:44:59 ~ 2013-01-21 08:14:59	30m	1280x960	818.77MB
2013-01-21 07:14:58 ~ 2013-01-21 07:44:59	30m 1s	1280x960	818.39MB
2013-01-21 06:44:58 ~ 2013-01-21 07:14:58	30m	1280x960	818.67MB
2013-01-21 06:14:58 ~ 2013-01-21 06:44:58	30m	1280x960	818.99MB
2013-01-21 05:44:58 ~ 2013-01-21 06:14:58	30m	1280x960	818.78MB
2013-01-21 05:14:58 ~ 2013-01-21 05:44:58	30m	1280x960	818.46MB
2013-01-21 04:44:58 ~ 2013-01-21 05:14:58	30m	1280x960	818.71MB
2013-01-21 04:14:57 ~ 2013-01-21 04:44:58	30m 1s	1280x960	818.43MB
2013-01-21 03:44:57 ~ 2013-01-21 04:14:57	30m	1280x960	818.67MB
2013-01-21 03:14:57 ~ 2013-01-21 03:44:57	30m	1280x960	818.89MB
2013-01-21 02:44:57 ~ 2013-01-21 03:14:57	30m	1280x960	818.87MB
2013-01-21 02:14:57 ~ 2013-01-21 02:44:57	30m	1280x960	818.44MB
2013-01-21 01:44:57 ~ 2013-01-21 02:14:57	30m	1280x960	818.69MB
2013-01-21 01:14:56 ~ 2013-01-21 01:44:57	30m 1s	1280x960	818.87MB
2013-01-21 00:44:56 ~ 2013-01-21 01:14:56	30m	1280x960	818.76MB
2013-01-21 00:14:56 ~ 2013-01-21 00:44:56	30m	1280x960	818.46MB
2013-01-20 23:44:56 ~ 2013-01-21 00:14:56	30m	1280x960	818.69MB
2013-01-20 23:14:55 ~ 2013-01-20 23:44:56	30m 1s	1280x960	818.88MB
2013-01-20 22:44:55 ~ 2013-01-20 23:14:55	30m	1280x960	818.8MB
2013-01-20 22:14:55 ~ 2013-01-20 22:44:55	30m	1280x960	818.39MB

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.30(Build 1561)

From the Recording page, click on the desired recording to view details:

Menu Item	Description
Recording Start/End Time	Displays the start and end time of this session recording. (Follows DD-MM-YYYY HH:MM:SS format)
Length	Displays the length of the recorded session. The maximum permitted length is 30 minutes.
Resolution	Displays the video resolution of the recorded session.
File Size	Displays the size of the recorded session. File sizes are expressed in MB (Megabytes) or KB (Kilobytes). File size may vary depending on recording resolution.
Status	Displays the conditions under which the session was recorded. Sessions with remote control are in red. Sessions without remote control remain unmarked.

6.4.3. Find Session Recordings by Date

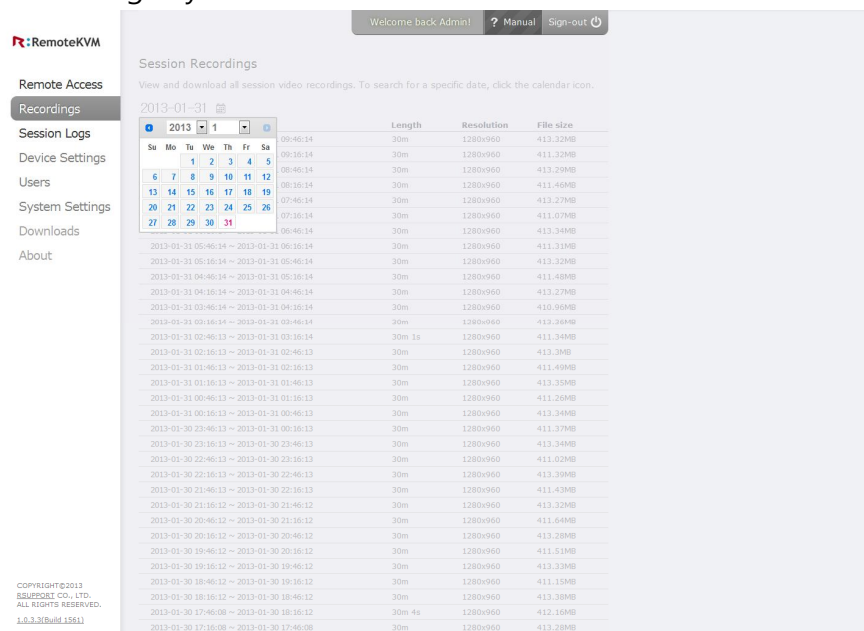

The screenshot shows the RemoteKVM web interface. On the left is a sidebar with navigation links: Remote Access, Recordings (highlighted), Session Logs, Device Settings, Users, System Settings, Downloads, and About. The main area is titled 'Session Recordings' and contains a sub-header 'View and download all session video recordings. To search for a specific date, click the calendar icon.' Below this is a table of recordings. The table has columns for Start/End Time, Length, Resolution, and File size. A calendar icon is located above the table. The table lists numerous recordings, each with a unique start and end time, a length of 30m, a resolution of 1280x960, and a file size of approximately 413.32MB. The interface also includes a top navigation bar with 'Welcome back Admin!', a help icon, and a 'Sign-out' button.

To sort and view session recordings by date, click on the 'Calendar' icon and select the desired date.

6.5. Session Logs

RemoteKVM

Welcome back Admin! ? Manual Sign-out

Session Logs

Select a device from the list to monitor the system or click a row to view more detailed information.
Log data is stored for 3 months.

2013-01-21

Time	Action	Status	Device	User
01.21 11:25	System Settings	Modify	General	admin
01.21 11:18	Sign-in	Process		admin
01.21 11:16	Sign-in	Process		admin
01.21 9:22	Sign-in	Process		admin

Admin Sign in at Monday January 21 2013 9:22:28 AM

* IP : 192.168.3.120
* OS : Windows 7
* Browser : Google Chrome 24.0.1312.52

01.21 9:22	Sign-out	Process		admin
01.21 9:20	Sign-in	Process		admin
01.18 16:57	Sign-in	Process		admin
01.18 16:57	Downloads	Download		admin
01.18 16:55	Sign-in	Process		admin
01.15 11:38	Remote Access	Remote		Unknown User
01.15 11:36	Remote Access	Remote		Unknown User
01.10 17:54	Recordings	Download	KVM-207	admin
01.10 17:52	Sign-in	Process		admin
01.10 17:51	Sign-in	Process		admin
01.10 17:45	Sign-in	Process		admin
01.10 17:43	Sign-out	Process		admin
01.10 17:42	KVM-207	Reboot	KVM-207	admin
01.10 17:42	System Settings	Upgrade	Firmware	admin
01.10 17:39	Sign-in	Process		admin
01.10 17:37	Downloads	Download		admin
01.10 17:37	Sign-in	Process		admin
01.10 16:55	Downloads	Download		admin
01.10 16:55	Sign-in	Process		admin
01.10 16:55	Sign-out	Process		admin
01.10 16:54	KVM-207	Reboot	KVM-207	admin
01.10 16:54	System Settings	Upgrade	Firmware	admin
01.10 16:53	Sign-in	Process		admin

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.3(Build 1561)

Menu Item	Description
Log Date	This is the date this log was created. (Follows MM.DD HH:MM format)
Access Information	Displays information about the access location such as: IP, operating system, web browser & version.
Action	Displays the action performed.
Status	Displays the type of action performed.
Device	Displays which device the action was performed on.
User	Displays which user performed the action.

6.5.1. Find Logs by Date

RemoteKVM

Remote Access
Recordings
Session Logs
Device Settings
Users
System Settings
Downloads
About

Welcome back Admin! ? Manual Sign-out

Session Logs

Select a device from the list to monitor the system or click a row to view more detailed information.
Log data is stored for 3 months.

2013-01-31

Sa	Mo	Tu	We	Th	Fr	Sa
		1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31		

Time	Action	Status	Device	User
01.31 9:53	Sign-in	Process	General	admin
01.31 9:53	Sign-in	Process	General	admin
01.31 9:52	Sign-out	Process	General	admin
01.31 9:52	System Settings	Modify	General	admin
01.31 9:52	Sign in	Process	General	admin
01.30 20:16	Downloads	Download	General	admin
01.30 20:16	Downloads	Download	General	admin
01.30 20:09	Sign-in	Process	General	admin
01.30 17:44	Sign-in	Process	General	admin
01.30 16:58	Sign-in	Process	General	admin
01.30 16:29	Sign-out	Process	General	admin
01.30 16:19	Sign-in	Process	General	admin
01.22 16:15	Sign-in	Process	General	admin
01.22 17:54	Sign-in	Process	General	admin
01.22 17:54	Sign-in	Process	General	admin
01.21 11:54	Sign-out	Process	General	admin
01.21 11:33	System Settings	Modify	General	admin
01.21 11:29	System Settings	Modify	General	admin
01.21 11:25	System Settings	Modify	General	admin
01.21 11:18	Sign-in	Process	General	admin
01.21 11:16	Sign-in	Process	General	admin
01.21 9:22	Sign-in	Process	General	admin
01.21 9:22	Sign-out	Process	General	admin
01.21 9:20	Sign-in	Process	General	admin
01.21 9:20	Sign-in	Process	General	admin

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.3(Build 1561)

To sort and view session logs by date, click on the 'Calendar' icon and select the desired date.

6.6. Device Settings

You must have access to administrator privileges to manage devices.

6.6.1. Add a Device

RemoteKVM

Remote Access
Recordings
Session Logs
Device Settings
Users
System Settings
Downloads
About

Welcome back Admin! ? Manual Sign-out

Network Settings

Edit device network settings

Device Name * KVM-207

Device IP * 192.168.165.207

Subnet Mask * 255.255.0.0

Default Gateway * 192.168.254.1

Web Server Port * 80

The default port 80 may be changed if necessary

DNS Settings

Edit device DNS settings

Primary DNS 168.126.63.1

Secondary DNS

Authorized Users

Administrators have full access to all devices. this list is for standard users.
You can edit this list from the **Users** tab.

☒ Full access rights for standard users


Apply Add a device

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.3(Build 1561)

- ① From the 'Device Settings' page, click 'Add a Device'.
- ② Input the IP in 'Device IP'

- ③ Once the IP has been determined to be valid, the other information will be filled-in automatically.
- ④ Input which port to use when connecting. (80 is the default port)
- ⑤ Click 'Create' once you've finished.

6.6.2. Remove a Device

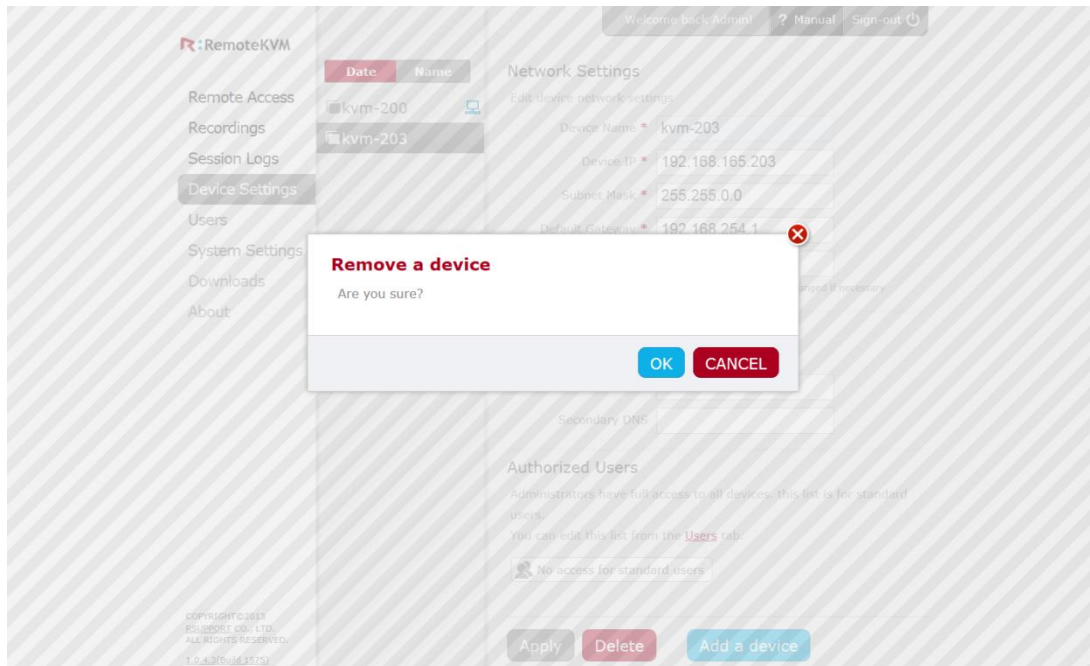

- ① From the 'Device Settings' page, select the device you wish to remove.
- ② Click 'Delete' and it will ask if you are sure.
- ③ Click 'OK' to remove the device.

6.7. Users

6.7.1. Add a User

You may create users with or without administrative privileges.

RemoteKVM

Remote Access
Recordings
Session Logs
Device Settings
Users
System Settings
Downloads
About

Welcome back Admin! ? Manual Sign-out

Manage user accounts

Modify the user ID and password

User ID * admin
IDs must be alpha-numeric and may only include the '-' and '_' special characters

Password
Password must be at least 4 characters in length

Confirm Password

Permissions

Set the account level permissions to be granted to this user

Account type: Super User (FULL ACCESS)

Save Create user

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.3(BUILD 1551)

- ① From the 'Users' page, click 'Create User'
- ② Input a user ID and password.
- ③ Select the level of access for the new user.
- ④ Click 'Create' once you've finished.

6.7.2. Remote a User

RemoteKVM

Remote Access
Recordings
Session Logs
Device Settings
Users
System Settings
Downloads
About

Welcome back Admin! ? Manual Sign-out

Date	ID
	admin
	new-user

Manage user accounts

Modify the user ID and password

User ID * new-user
IDs must be alpha-numeric and may only include the '-' and '_' special characters

Password
Password must be at least 4 characters in length

Confirm Password

Permissions

Set the account level permissions to be granted to this user

Account type: Super User (FULL ACCESS)

Save Create user

Delete user account
Are you sure?

OK CANCEL

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.3(BUILD 1551)

- ① From the 'Users' page, select the user you wish to remove.
- ② Click 'Delete' and it will ask if you are sure.
- ③ Click 'OK' to remove the user.

6.7.3. Edit User Permissions

You can edit user permissions from the 'Users' page.

RemoteKVM

Remote Access
Recordings
Session Logs
Device Settings
Users
System Settings
Downloads
About

Date	ID
	admin
	new-user

Manage user accounts

Modify the user ID and password

User ID * new-user
IDs must be alpha-numeric and may only include the '-' and '_' special characters

Password *
Password must be at least 4 characters in length

Confirm Password *

Permissions

Set the account level permissions to be granted to this user

Account type: Administrator
Administrator
Standard User

Create Cancel

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.30[Build 1551]

- ① From the 'Users' page, select the appropriate user.
- ② Under 'Permissions', select either Administrator, or Standard User from the drop-down menu.

6.7.4. Change User Password

RemoteKVM

Remote Access
Recordings
Session Logs
Device Settings
Users
System Settings
Downloads
About

Date	ID
	admin

Manage user accounts

Modify the user ID and password

User ID * admin
IDs must be alpha-numeric and may only include the '-' and '_' special characters

Password *
Password must be at least 4 characters in length

Confirm Password

Permissions

Set the account level permissions to be granted to this user

Account type: Super User (FULL ACCESS)


Save Create user

COPYRIGHT©2013
RSUPPORT CO., LTD.
ALL RIGHTS RESERVED.
1.0.3.30[Build 1551]

- ① From the 'Users' page, select the appropriate user.
- ② Input the new password, then re-enter to confirm.

- ③ Click 'Save' once you've finished.

6.8. Language Settings

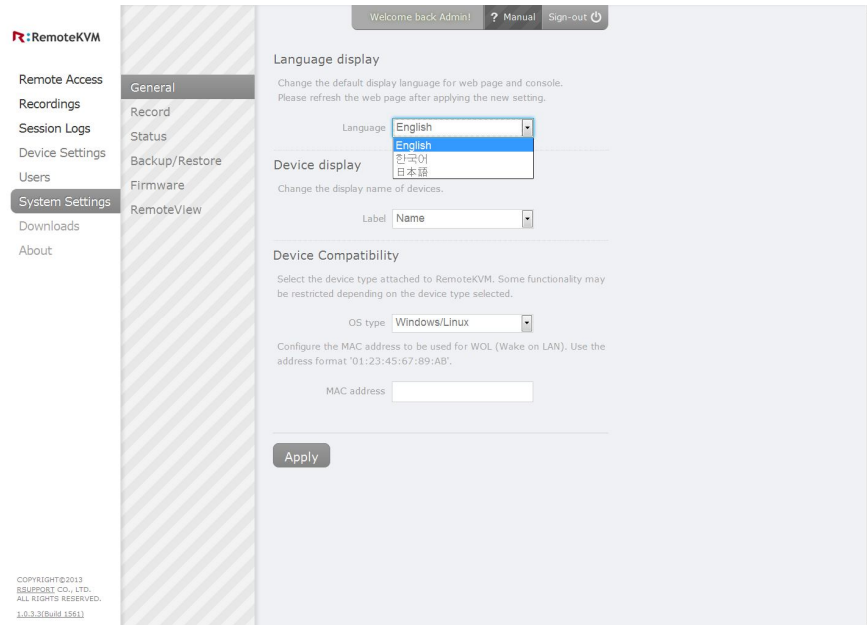


- ① Go to System Settings > General > Language Settings and select your desired display language.
- ② English, Korean, and Chinese are currently supported.
- ③ Click 'Apply' once you've finished.

6.9. Updating Firmware

6.9.1. What is Firmware?


Firmware is preinstalled software contained in electronic and computing device, such as RemoteKVM. Firmware is held in non-volatile memory devices such as ROM, or EPROM. Firmware can be updated to easily address bug fixes and add additional features later on without having to modify the device itself.

6.9.2. Check for the Latest Firmware Update

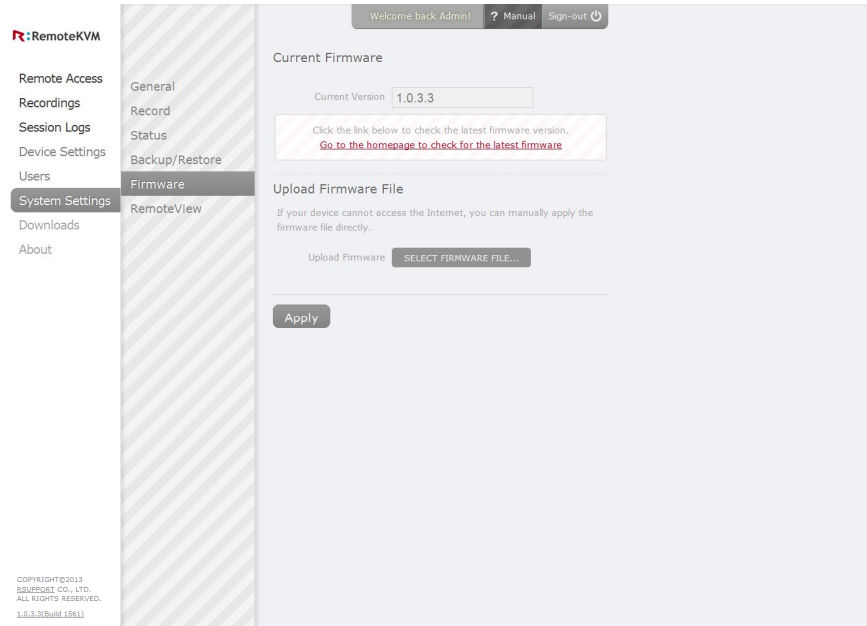

- ① Go to System Settings > Firmware
- ② The current version is displayed, click on 'Go to the homepage to check for the latest firmware' to verify if your RemoteKVM is up to date.


6.9.3. Upload Firmware

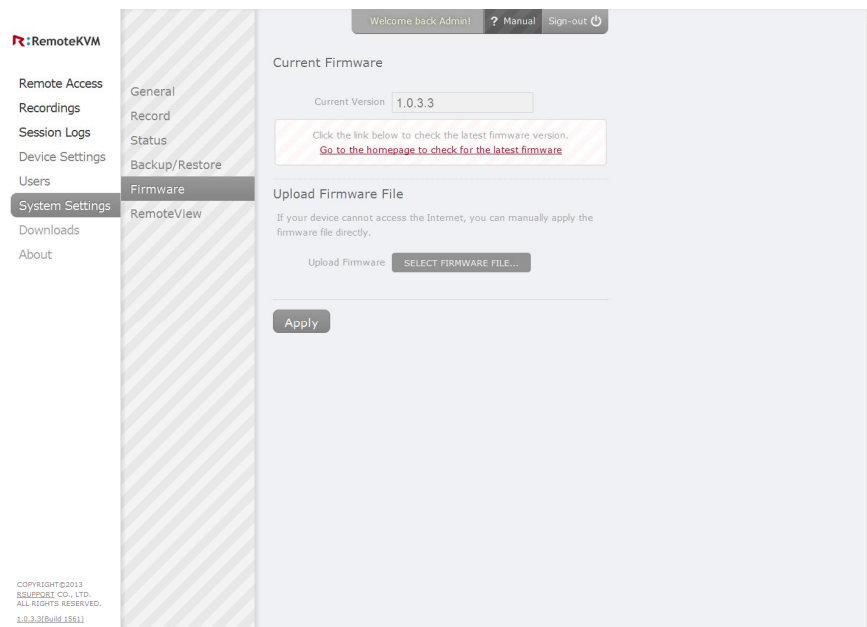

- ① Go to System Settings > Firmware
- ② To manually update firmware, click 'Select Firmware File...'
- ③ Select the downloaded firmware file and click 'Apply'.


6.10. Database Backup / Restore

6.10.1. Backing up the Database

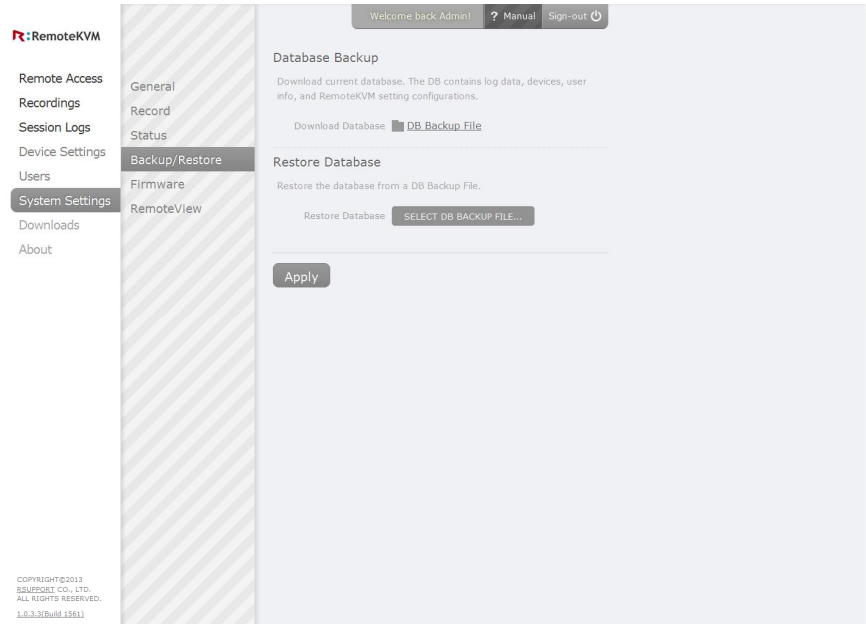

- ① Go to System Settings > Backup/Restore
- ② Select the database you wish to backup.
- ③ Download the 'DB Backup File' onto a local device.

6.10.2. Restoring the Database

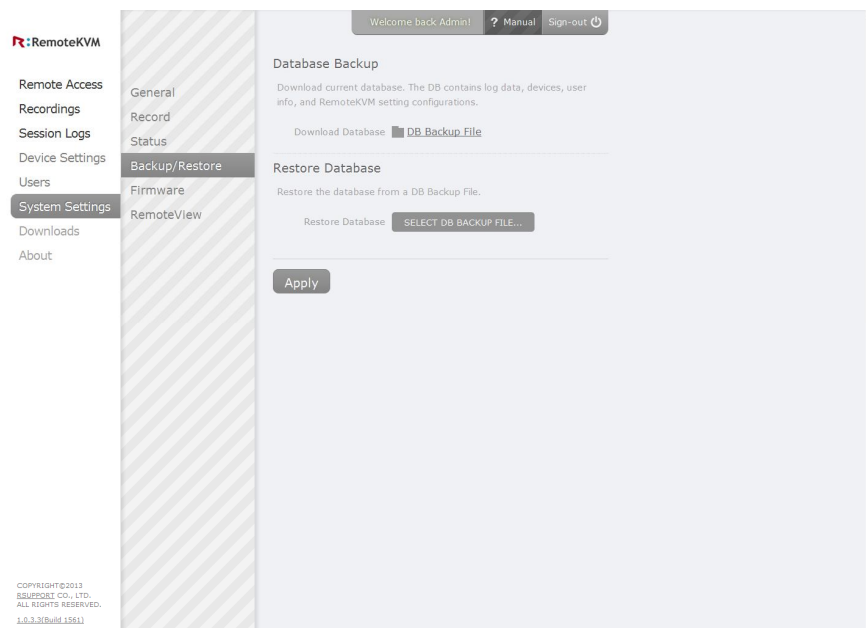


- ① Go to System Settings > Backup/Restore
- ② Click 'Select DB Backup File...' under Restore Database.

- ③ Select the database you wish to restore.
- ④ Click 'Apply' once you've finished.


6.11. Remote Access Plug-in Setup

6.11.1. Downloading the Remote Access Plug-in


Go to the 'Downloads' page and download the plug-in onto your computer.

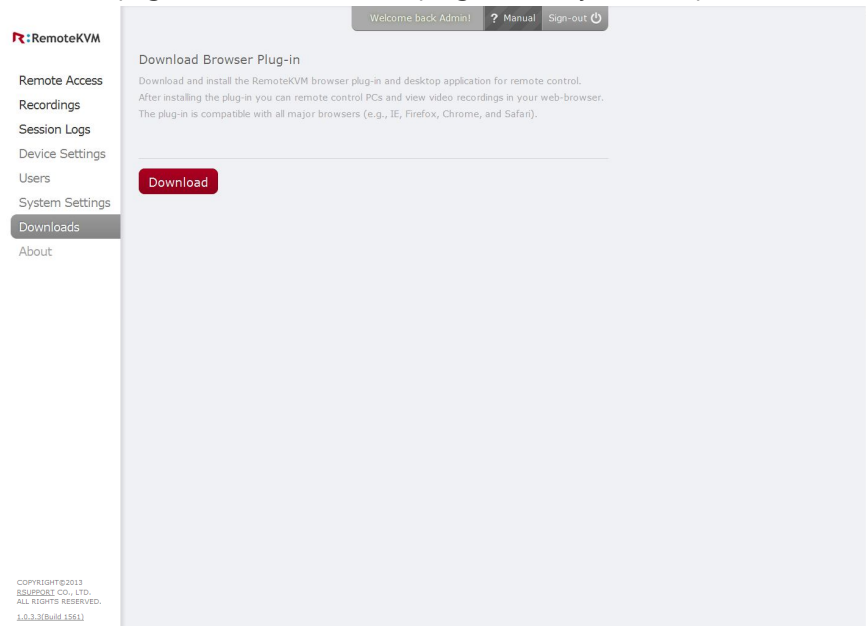


6.11.2. Installing the Remote Access Plug-in

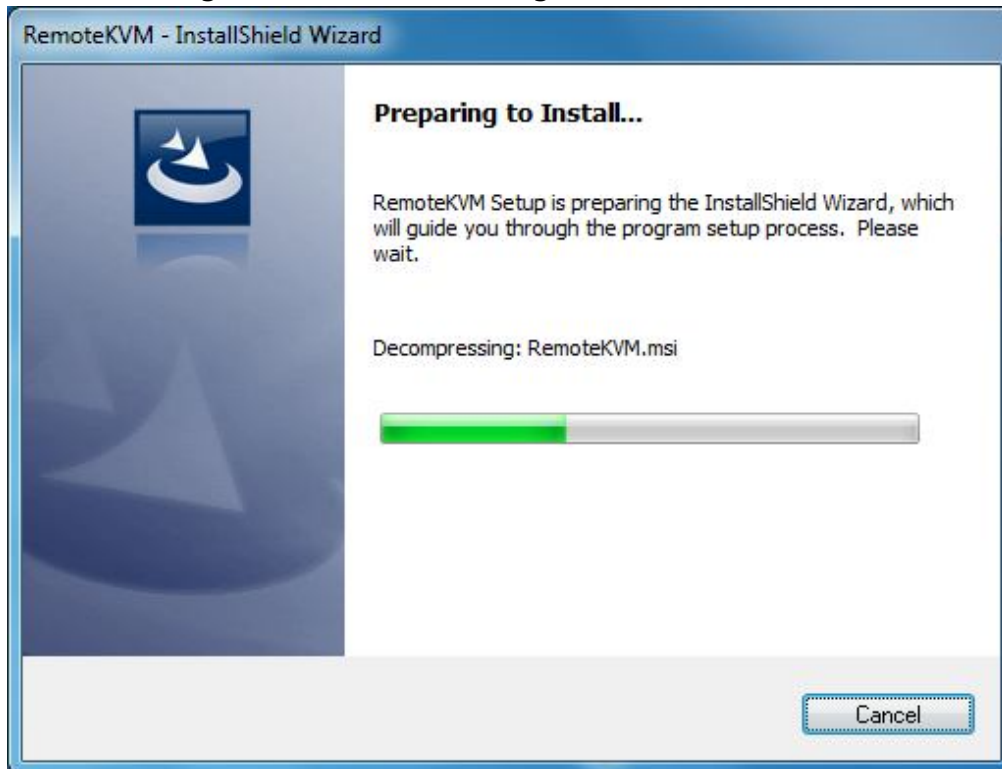


- ① Double click and run the plug-in file (kvm_setup.exe) downloaded from [\[6.11.1 Downloading the Remote Access Plug-in\]](#)

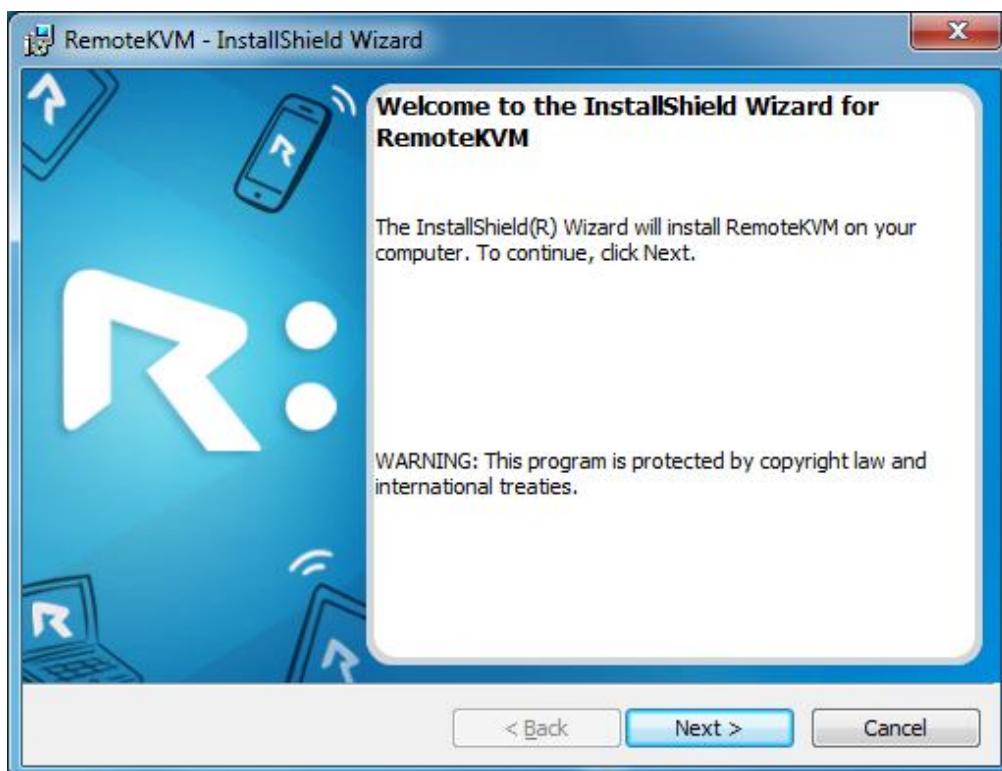


- ② Click 'Next' to continue the installation process.

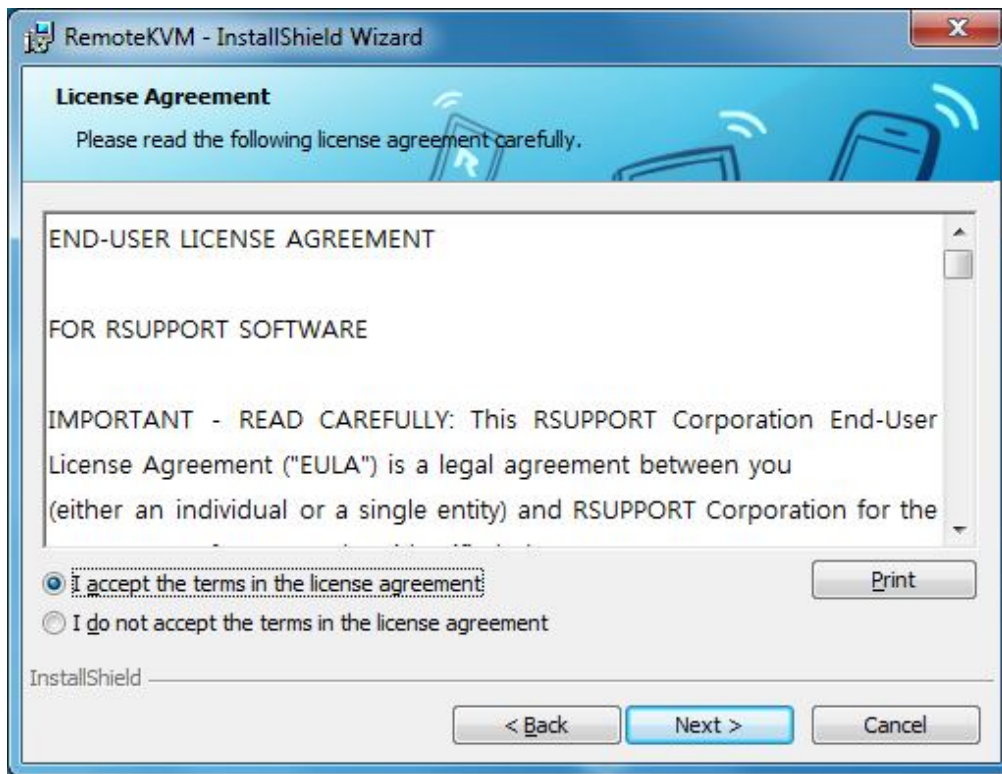

- ③ Read and Accept the User Agreement, then click 'Next' to continue the installation process.

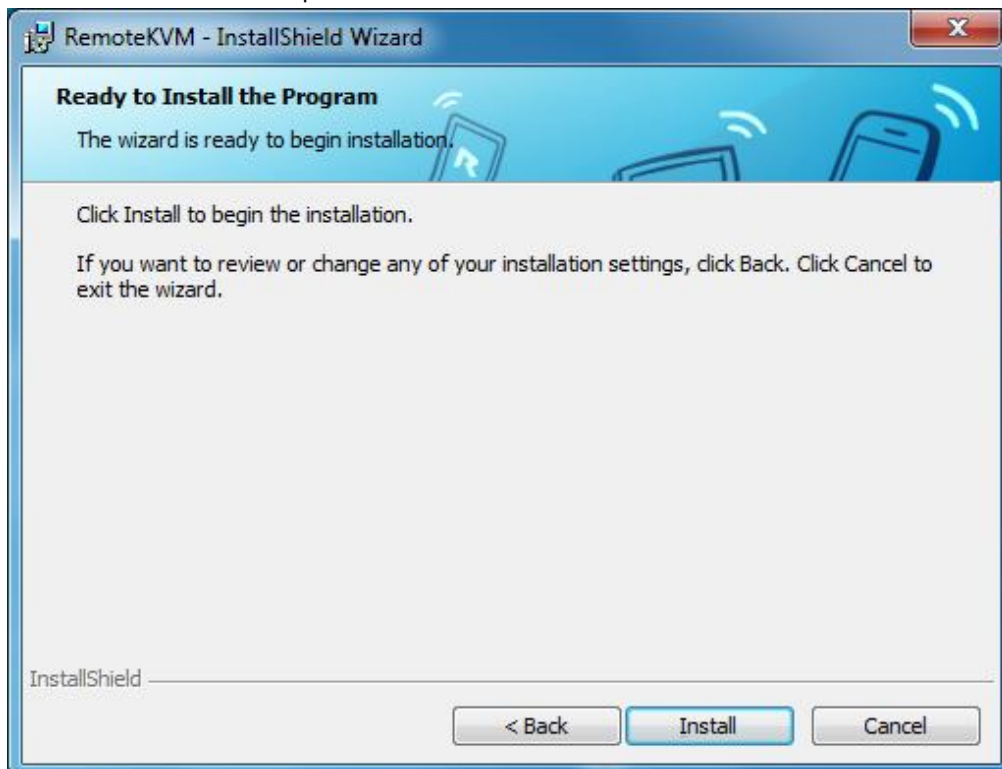

- ④ Click 'Install' to continue the installation process.

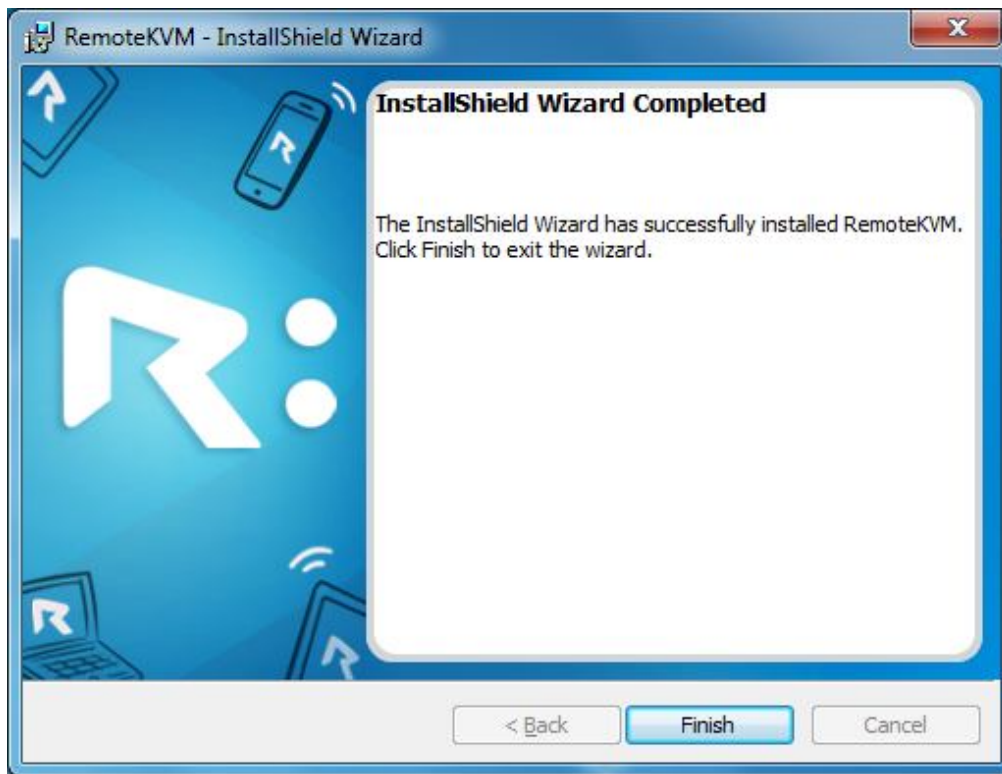

- ⑤ Once the installation has completed, click 'Finish'

6.11.3. Updating the Remote Access Plug-in

RemoteKVM will prompt you to update the plug-in if your plug-in is outdated. Proceed with the update to download the latest Remote Access Plug-in.

7. Remote Access Controls

7.1. Using Remote Control

Refer to [\[6.3.2. Real-time Monitoring & Remote Control\]](#) to utilize remote control. For additional information on RemoteViewer, refer to [\[Using RemoteViewer\]](#).





7.2. RemoteViewer Resolution


Resolution	Refresh Rate (Hz)
640 * 480	60, 75
800 * 600	60, 75
960 * 600	60
1024 * 768	60, 75
1088 * 612	60

1152 * 864	60
1280 * 720	60
1280 * 768	60, 75
1280 * 800	60
1280 * 960	60, 75
1280 * 1024	60
1360 * 768	60
1360 * 1024	60
1400 * 1050	60
1440 * 900	60
1600 * 900	60
1600 * 1024	60
1600 * 1200	60
1680 * 1050	60
1920 * 1080	60

7.3. Using RemoteViewer

7.3.1. RemoteViewer Features

 Main	Control Settings	Remote Access settings
	Remote PC Screen Lock	Turns OFF the remote PC's display
	Always on Top	Always keeps the RemoteViewer application on top
	Lock Viewer	Turns OFF the local PC's display
	Exit	Ends remote control
 Mouse & Keyboard	Mouse & Keyboard Control	Controls the remote PC with local keyboard and mouse
	Single Mouse	Displays pointer on the remote PC screen only
	Ctrl+Alt+Del Input	Sends 'Ctrl+Alt+Del' command to the remote PC
 Screen	Customization	Adjusts the screen size of the remote PC (25%-200%)
	Autofit	Automatically adjusts the remote PC's screen size to fit
	Actual Size	Displays the actual resolution of the remote PC
	Full Screen	Displays the full screen of the remote PC
	Refresh	Refreshes the RemoteViewer screen
	Screen Capture	Takes a screenshot of the remote PC screen (Saved as

Tools		*.png)
 Extra Features	Virtual USB Drive	Emulate your local USB drive on the remote PC
	Virtual CD-ROM	Emulate your local CD-ROM drive on the remote PC
	Virtual Image	Mount an image file (*.iso) on your local PC to be used on the remote PC
	Virtual Connection Cancel	Disconnect the virtual drive.

7.3.2. RemoteViewer > Main

7.3.2.1. Control Settings

Apply additional remote control settings. It is possible to apply these settings while remote controlling a PC.

Remote Screen	Screen Quality	Set the RemoteViewer screen quality Set to: Low – Medium – High
Screen Scroll	Auto Scroll	Check to enable 'Auto Scroll' Functionality Auto Scroll allows you to scroll by moving your mouse to the corners of your RemoteViewer screen when the remote PC screen is larger than your local display.
	Panning	Check to enable 'Panning' Functionality Panning allows you to click and drag the screen to move it in the desired direction.

7.3.2.2. Remote PC Screen Lock

Turns the Remote PC's display off. The remote PC's display won't be viewable until 'Remote PC Screen Lock' has been deselected.

7.3.2.3. Always on Top

Always keeps the RemoteViewer application on top.

7.3.2.4. Exit

Ends remote control. Click 'Yes' when asked if you wish to close Remote Access.

7.3.3. RemoteViewer > Keyboard and Mouse Menu

7.3.3.1. Keyboard and Mouse Control

Upon connection, keyboard and mouse controls are enabled by default. Click the 'Keyboard and Mouse' icon to toggle remote control on and off.

Single Mouse

Synchronizes your local mouse movement with the pointer displayed on the RemoteViewer screen.

7.3.3.2. Ctrl+Alt+Del Transfer

Sends 'Ctrl+Alt+Del' command to the remote PC

7.3.4. RemoteViewer > Screen

Choose between various screen settings to fit your remote viewing environment. Click the 'Screen' icon to sequentially decrease the screen size of the remote PC.

7.3.4.1. Customization

Manually adjust the remote PC's screen size. 25% to 200% Zoom is capable.

7.3.4.2. Autofit


Automatically adjust the remote PC's screen size to fit within the RemoteViewer.

7.3.4.3. Actual Size

Sets the remote PC's screen size to its designated resolution. (Depending on your viewing environment, the screen size may exceed the size of your RemoteViewer.)


7.3.4.4. Full Screen

Shows the full screen of the remote PC on your local RemoteViewer.

To exist 'Full Screen' mode, click on the  icon in the RemoteViewer Toolbar and select 'Restore Screen'. Or, click the 'Screen Restore' icon on the right-hand side of the toolbar to exit 'Full Screen' mode.

Tip!

The 'Pin' feature prevents the tool bar from hiding automatically once you take your pointer off of it. Utilize the 'Pin' feature for added convenience while in 'Full Screen' mode.

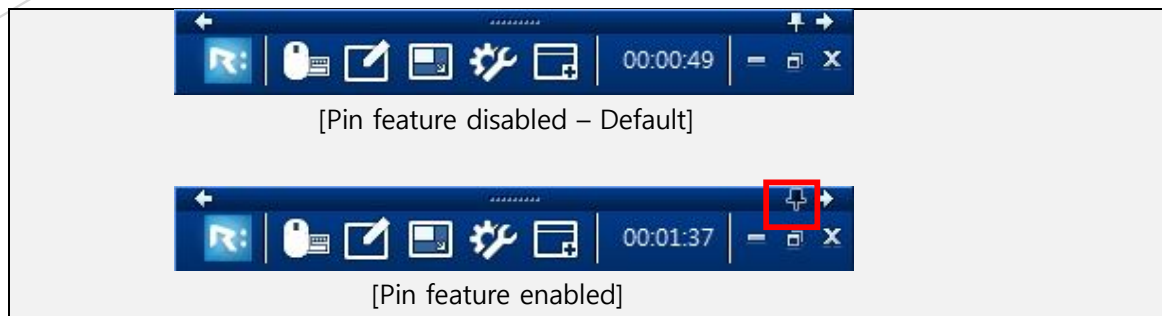

7.3.4.5. Refresh

Refreshes the RemoteViewer screen.

7.3.5. RemoteViewer > Tools

7.3.5.1. Screen Capture

Capture and store the remote PC's screen. (Saved as a *.png file)

- Screen Capture Image Default Storage Directory (Windows 7) :
C:\Users\Public\Documents\RSUPPORT\RemoteKVM\Capture

7.3.6. RemoteViewer > Virtual Drives

7.3.6.1. Virtual USB Drive



Insert a USB Drive into the USB port on your local PC. Then, click 'Virtual USB Drive' to use your local USB drive as a virtual USB drive for your remote PC.

7.3.6.2. Virtual CD-ROM



Insert a CD into the CD-ROM drive on your local PC. Then, click 'Virtual CD-ROM' to use your local CD-ROM drive as a virtual CD-ROM drive for your remote PC.

7.3.6.3. Virtual Image



Mount an image file (*.iso) onto your local PC. Then, click 'Virtual Image' to use your mounted image on your remote PC.

7.3.6.4. Virtual Connection Cancel



connected



unconnected

Upon selecting a virtual device, the icon will activate. Click 'Virtual Connection Cancel' to end the connection.

8. About

Your RemoteKVM's version information and serial number are shown here. In addition, customer support contact information for RemoteKVM customers will be available here.

9. Help

Provides the same helpful information that are available online and in this manual.

10. Customer Support

This manual was created to help even first-time users understand how to use RemoteView. If you are still unsure on how to use RemoteView, please refer to the section below for additional support.

Rsupport Homepage

Additional information, tips, or tech-related questions in regards to RemoteView can be found on our website. For matters that are not listed on our website; please leave an Online Inquiry and we will be sure to reply as soon as possible. Thank you.



For more information about RSUPPORT, please visit
<http://www.rsupport.com>

Korea :

(138-724) 서울시 송파구 방이동 45 번지
한미타워
15 층, 16 층
전 화 : +82-70-7011-3900
팩 스 : +82-2-479-4429
기술문의 : support.kr@rsupport.com
구매문의 : sales.kr@rsupport.com
기타문의 : info.kr@rsupport.com

Japan :

〒100-0013 東京都千代田区霞ヶ関 3-3-2
新霞ヶ関ビル 18 階
TEL : +81-3-3539-5761
FAX : +81-3-3539-5762
お問い合わせ : support.jp@rsupport.com
Sales : sales.jp@rsupport.com
Info : info.jp@rsupport.com

USA :

333 Sylvan Avenue, Suite 110
Englewood Cliffs, NJ 07632
Phone : +1-888-348-6330
Fax : +1-888-348-6340
Tech : support.us@rsupport.com
Sales : sales.us@rsupport.com
Info : info.us@rsupport.com

China :

北京市朝阳区霄云路 38 号现代汽车大厦 2203
室 I-101
联系电话 +86-10-8256-1810
传真号码 +86-10-8256-2978
技术咨询 support.cn@rsupport.com
销售咨询 sales.cn@rsupport.com
其他咨询 info.cn@rsupport.com